

ENGLISH

STOPWATCH OPERATION

Press A until at Stopwatch display.

If necessary, Press B-Stop & C-Reset to 0.

<u>Event</u>	<u>Split</u>	<u>1-2 Finish</u>
B-Start	B-Start	B-Start
B-Stop	C-Split	C-Stop#1
(Repeat B,B	C-Release	B-Stop#2
tim-in/	(Repeat C,C	(See#1 time)
time-out)	each Split)	C-Release
C-Reset	B-Stop	(See#2 time)
	C-Reset	C-Reset

TIME, CALENDAR & ALARM DISPLAY

Press A until at time display,

Hold B-display Month, date & day

Hold C-display Alarm

Hold B&C Alarm on/off

TO SET TIME & CALENDAR

Press A 3 times to enter Set Mode

Press C to select Seconds, Minutes, Hour

(A/P = 12 hour, H = 24 hour), Date, Month, Day.

Press B to change any of the above.

(Seconds only refers to 00.)

(Hold B to change digits rapidly.)

Press A to return to Time display.


TO SET ALARM

Press A 2 times to enter Set Mode.

Press C to select Minutes & Hours.

Press B to change Minutes & Hours.

Press A to return to Time display.

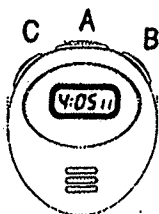

The Chime can be turned on or off in the following procedures.

1. Press the Left (LAP-RESET) button, if you can see the day flag "S M T W T F S" appear, the chime is ON. (see chime check mode image)
2. Hold the Left button and Press the Middle (MODE) button, the day flags disappear, the chime is OFF (see chime off mode image)
3. Hold the Left button and Press the Middle (MODE) button again, the day flags appear again, the chime is turned ON (see chime on mode image)